

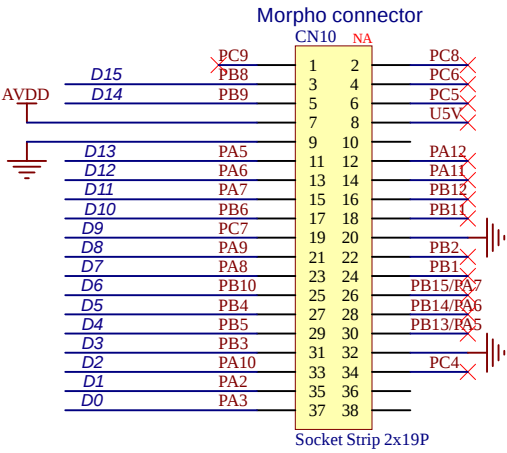
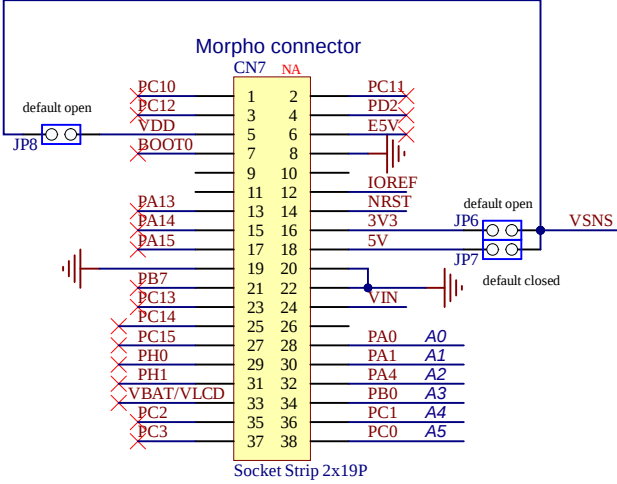
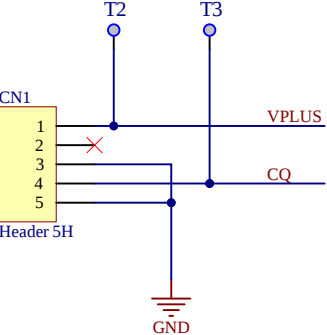
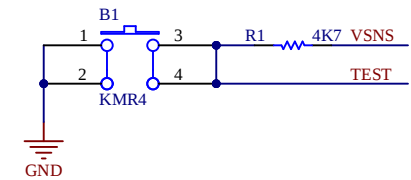
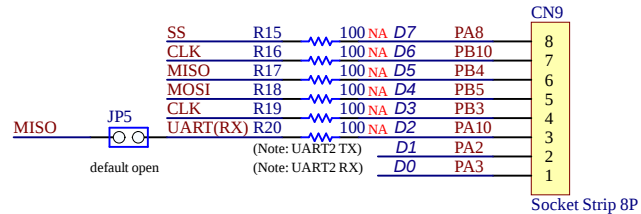
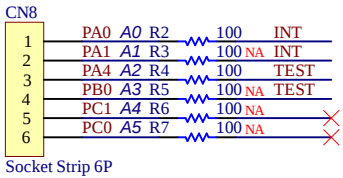
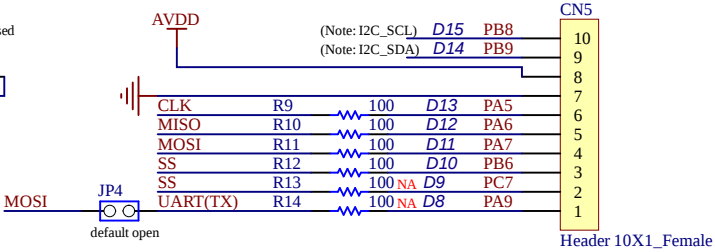


Arduino Connector

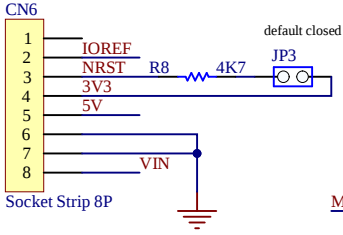


LOGO
EXPLORER

T1

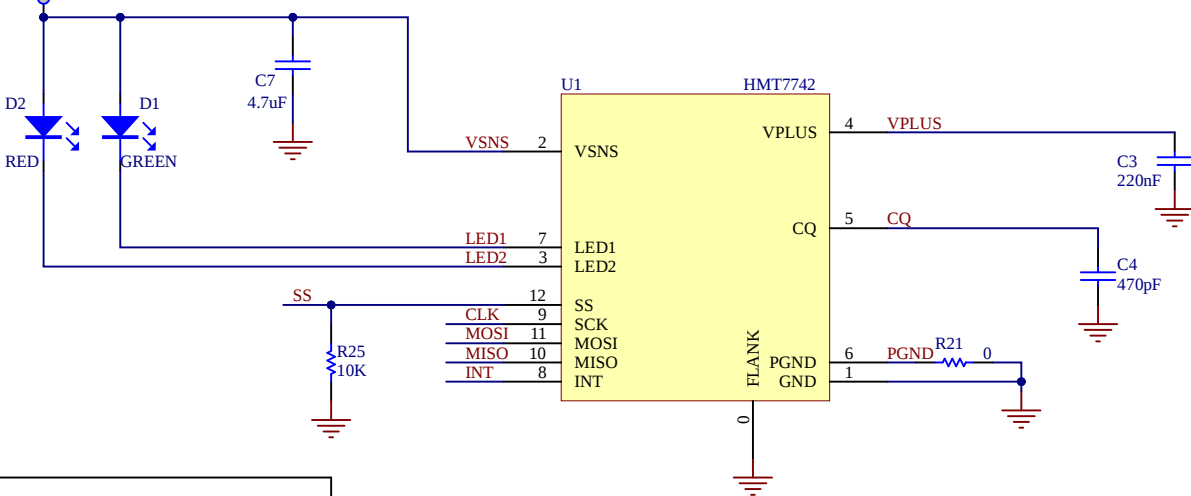

Foofprints for debug purpose

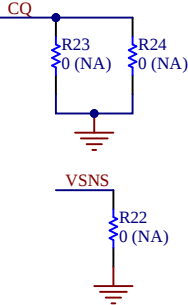

NA = Not Assembled